


SYSTEM DRAINAGE

- Shut pressure pump off.
- Insert a rod into the stand pipe and push down on valve to open and drain the system above the valve.

IMPORTANT: Local codes vary. Check local applicable codes before installing.

No warranties, expressed or implied, by Maass Midwest Mfg., Inc.

Installer is responsible for meeting local, state and federal codes.

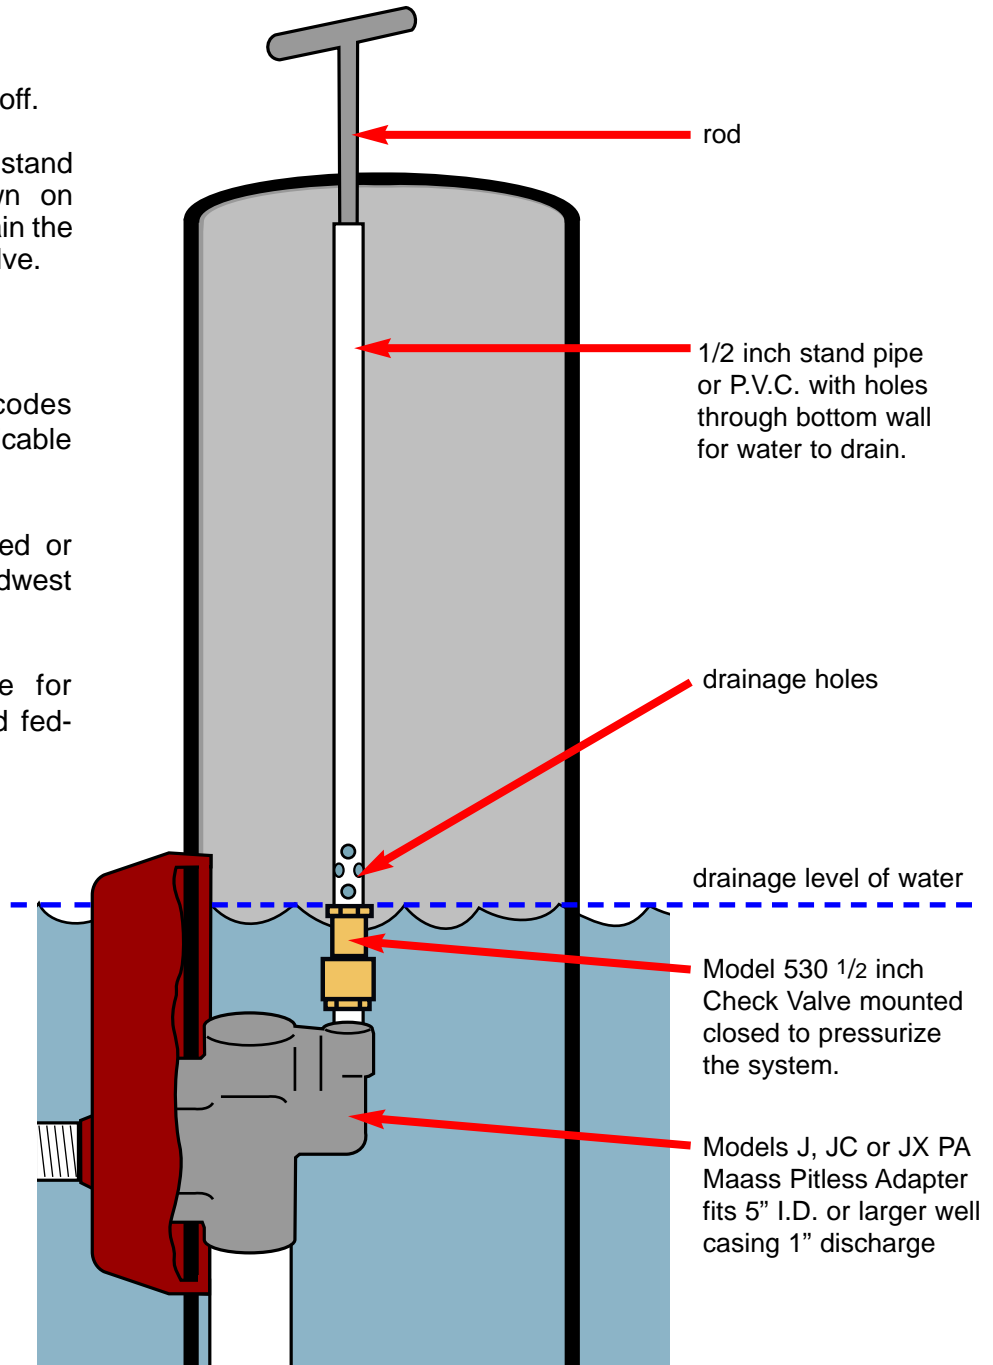

MANUFACTURERS OF QUALITY WATER WELL ACCESSORIES

©2004, MAASS Midwest Manufacturing, Inc. All rights reserved.

P. O. Box 547, 11283 Dundee Road, Huntley, IL 60142-0547

(800) 323-6259 • IL AREA (847) 669-5135

MEMBER:

